



REMIX

USER'S MANUAL



REGISTER NOW AT
www.v-moda.com/register

CAUTION

If **serial number** on the product, on manual cover or bottom of packaging is missing or defaced, **please return to retailer** immediately.

IMMORTAL
LIFE
PROGRAM

1YR
WARRANTY

english

To acquire a printable version of this manual, please visit www.v-moda.com/manuals

español

Para adquirir una versión impresa de este manual, visite por favor www.v-moda.com/manuals

português

Para adquirir uma versão impressa deste manual, acesse www.v-moda.com/manuals

français

Pour obtenir une version imprimable de cette manuel, veuillez consulter www.v-moda.com/manuals

italiano

Per ottenere una copia stampabile di questa manuale, visitare il sito www.v-moda.com/manuals

deutsch

Eine Handbuch zum Ausdrucken erhalten Sie unter www.v-moda.com/manuals

한국어의

수 동의 인쇄판을 얻으려면 www.v-moda.com/manuals

简体中文

要获得说明书的打印件, 请访问 www.v-moda.com/manuals

繁體中文

要獲得說明書的打印件, 請訪問 www.v-moda.com/manuals

日本語

本取扱説明書の電子版を以下のページからダウンロード・
プリントアウトすることができます www.v-moda.com/manuals

ROCK SAFELY

Enjoy your music responsibly. According to the American Speech-Language-Hearing Association (ASHA), “listening to personal music players, stereos and headphones at high volumes for extended periods of time can directly result in lifelong hearing loss”. At V-MODA we are dedicated to providing an enjoyable listening experience, but we also care greatly about your personal health and safety. We recommend that you listen to your REMIX® speaker at comfortable volume levels for reasonable periods of time.

How to enjoy your music responsibly

- Turn down the volume. A good point of reference is half volume.
- Limit listening time. Give your hearing a “time out”.

 
Caution around children. Keep out of reach of children, the parts included with this product can be a choking hazard. This product is not intended for children under 7 years of age.

WELCOME

Welcome to V-MODA, the music lifestyle. We sincerely hope you enjoy our REMIX speaker, the pinnacle of sound and quality design. With the essence of music at the foundation of all we do, we have precisely engineered our REMIX speaker to provide an enjoyable and natural sound signature, which invokes the sense of listening to your music live. **Play Hard. Rock Harder.**

Package Contents

1



2



3



4

 


1. REMIX Wireless Speaker
2. USB-A to USB-C charging cable
3. Daisy Chain cable
4. 4x REMIXRings

CHARGING THE SPEAKER

The REMIX speaker has a built-in lithium-ion rechargeable battery. Fully charge the REMIX speaker for 3 hours before using it for the first time.

Note that REMIX is equipped with USB-A to USB-C charging cable for faster and safer charging. Do not use any other type of charging cables to charge the REMIX speaker.

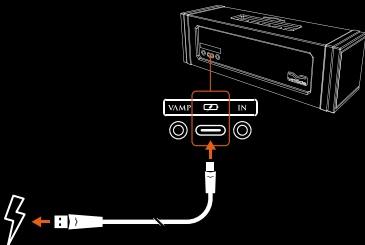


- Fading orange LED = charging
- White LED = fully charged
- Blinking orange LED = low battery

TURNING ON/OFF THE REMIX SPEAKER – BATTERY STATUS

When turning on the REMIX speaker, the orange LED indicates the battery level.

 1. Press the  button to turn on the REMIX speaker. Power on tone plays and the orange LED flashes a number of times based on the battery level:

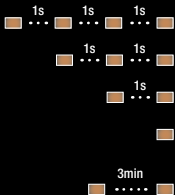


- Battery 100-81%: orange LED flashes 4 times
- Battery 80-61%: orange LED flashes 3 times
- Battery 60-41%: orange LED flashes twice
- Battery <40%: orange LED flashes once
- Low battery: orange LED flashes twice in 3 minutes while operating


2. Press the  button to turn off the REMIX speaker. Power off tone plays and all LEDs turn off.

WIRELESS MODE

 TOP VIEW

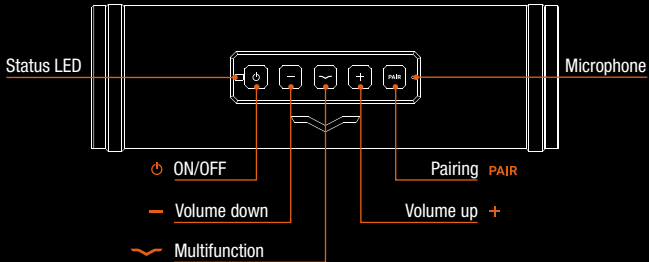

BACK VIEW

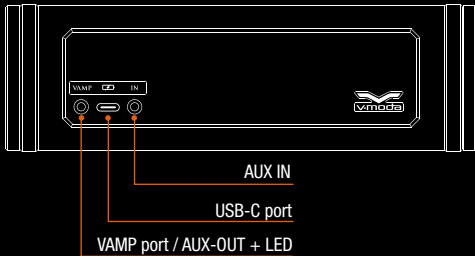 

PAIRING AND CONNECTING WITH A NEW BLUETOOTH DEVICE

When pairing with one, two or more Bluetooth devices, perform the following pairing procedure every time you pair a new device.

1. **Press the  button to turn on the REMIX speaker.**

Power on tone plays, battery level orange LED flashes, then white LED flashes twice every second while the VAMP orange LED is on.

2. **Press and hold  for 3 seconds to connect the new Bluetooth device.** Once “V-MODA REMIX” appears in the “new/available Bluetooth devices” section on your phone, select it to begin pairing. If passkey input is required on the display of a Bluetooth device, type “0000”.

3. **Ready to rock.** When the Bluetooth connection is established, connected tone plays and white LED on the REMIX speaker stays lit.



CONNECTING WITH A PAIRED BLUETOOTH DEVICE

When pairing with one, two or more Bluetooth devices, perform the following procedure every time you connect the REMIX speaker with an already paired device.

1. Press the  button to turn on the REMIX speaker. Power on tone plays, battery level orange LED flashes a number of times based on the battery level.
2. Ready to rock. When the Bluetooth connection is established, connected tone plays and white LED on the REMIX speaker stays lit.

If device does not auto connect, go to Bluetooth settings and select "V-MODA REMIX".

LISTENING TO MUSIC, TRACKS CONTROL AND VOICE ASSISTANT



 
Start playback on the paired/plugged device and adjust the volume with the  and  buttons on the REMIX speaker




Press and hold  for up to 10 seconds to reach max volume



Press and hold  for up to 10 seconds to reach min volume



Press  once to play and pause

 

Press  twice for next track



Press  3 times for previous track

 


Press and hold  for 3 seconds to summon Voice Assistant such as Siri/OK Google

Track controls may vary based on device and settings.

MAKING A CALL / RECEIVING A CALL

ANSWER A CALL



Press  once to answer (music pauses automatically)

REFUSE / HANG UP



To refuse an incoming call or to hang up an existing call, press and hold  for 2 seconds, then release

CALL ON HOLD



 
Press  once to put the ongoing call on hold and connect to the second incoming call; long press  for 2 seconds to connect the second call and hang up the first call; short press  twice to refuse a second call while attending one

Making a call/ Receiving a call functions do not work in wired mode.

WIRED MODE

When connecting an audio device via AUX IN, plug in the device with the included audio cable.

1. Plug in an audio device into REMIX speaker's AUX IN via V-MODA audio cable.

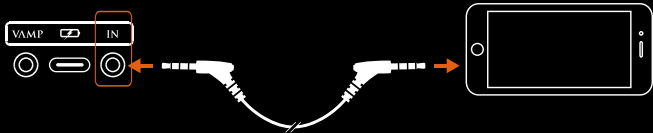


2. Press the  button to turn on the REMIX speaker. Power on tone plays, battery level orange LED flashes a number of times based on the battery level.
3. **Ready to rock.** When the AUX IN connection is established, both white LED and VAMP orange LED stay lit; audio device is ready to play.

VAMP MODE

VAMP Mode transforms the REMIX speaker into a headphone amplifier for stunning sound quality.

 1. Plug in an audio device into REMIX speaker's AUX IN via V-MODA audio cable.
2. Press the  button to turn on the REMIX speaker. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit.
3. Plug in headphones into REMIX speaker's VAMP port via audio cable.
4. Press the  button once to switch to VAMP mode. Orange LED stays lit.
5. Ready to rock. Press the  and  buttons to adjust the amplified volume of your headphones




NOTE: When in VAMP mode, be extremely careful of listening levels

DAISY CHAIN MODE - BLUETOOTH

Two or more REMIX speakers can be linked together and play seamlessly via the same audio player.

1. Press the  button to turn on the REMIX speaker. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit.
2. Bluetooth connect REMIX speaker 1 and audio player following the instructions on page 10.
3. Plug in REMIX speaker 1's VAMP and REMIX speaker 2's AUX IN.
4. Press the  button to turn on the REMIX speaker 2. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit.
5. REMIX speakers are now in “daisy chain” mode. You can adjust the output volume on either one of the speakers and enjoy music from both speakers at the same time.
6. (optional). Repeat steps 3 and 4 to add more REMIX speakers to the “daisy chain”.

 DAISY CHAIN MODE - BLUETOOTH

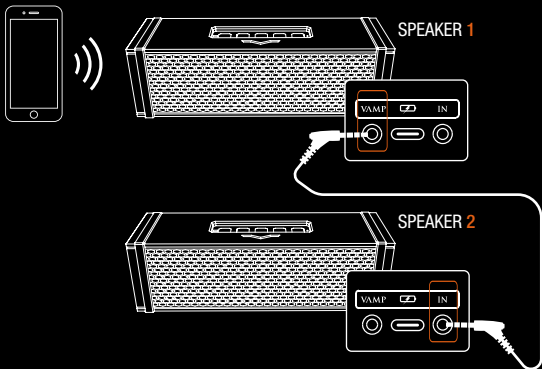


DAISY CHAIN MODE - WIRED


1. Plug in an audio device and REMIX speaker 1 via V-MODA audio cable.
2. Plug in REMIX speaker 1's VAMP and REMIX speaker 2's AUX IN.
3. Press the  button to turn on both REMIX speaker 1 and REMIX speaker 2. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit on both REMIX speakers.
4. REMIX speakers are now in “daisy chain” mode. You can adjust the output volume on either one of the speakers and play from both speakers at the same time.
5. (optional). Repeat steps 2 and 3 to add more REMIX speakers to the “daisy chain”.

DAISY CHAIN MODE - WIRED

 SPEAKER 1

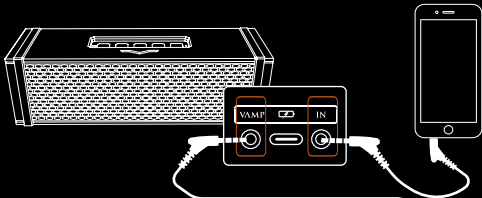


SPEAKER 2

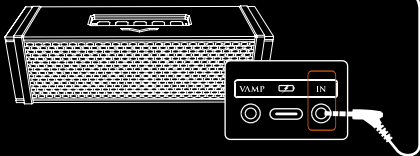 

ONE REMIX SPEAKER, TWO AUDIO DEVICES

The REMIX speaker can be connected to two audio devices at the same time and play alternatively from both audio devices.

 1. Bluetooth connect REMIX speaker and audio player 1 following the instructions on page 10
2. Bluetooth connect REMIX speaker and audio player 2 following the instructions on page 10
3. Re-connect REMIX speaker and audio player 1 by using the player's Bluetooth devices pairing sections
4. Shift the audio player from 1 to 2 by controlling the play/pause buttons on the audio players
5. The  button on the REMIX speaker will control only play/pause of the playing audio player

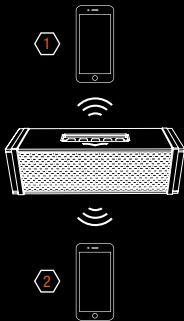

OTHER USEFUL FUNCTIONS

RESET PAIRED DEVICES HISTORY



HOLD 3sec

To reset paired devices history press and hold   for 3 seconds. White and orange LEDs flash alternatively twice.

POWER SAVING MODE



If no device is paired with the REMIX speaker for 3 minutes, white LED starts to flash once every 3 seconds, VAMP orange LED stays lit for **power saving mode**. To resume the REMIX speaker simply press the  button. If no audio signal is detected or no device is paired with the REMIX speaker for 10 minutes, power off tone plays and all LEDs turn off. The REMIX speaker is now switched off.

CONNECTION OUT OF RANGE



If the audio device is outside the connection range “Out of Range” tone plays every 5 seconds for 2 minutes, white LED flashes twice per second and VAMP orange LED stays lit until the device automatically connects when back within the connecting range. If no device to be connected is detected for 2 minutes, speaker will switch to power saving mode.

HOW TO CHECK YOUR BATTERY STATUS

 


To easily check the REMIX speaker battery status, hold the  button for 2 seconds. Orange LED flashes 4 times if battery life is between 81-100%; 3 times if battery life is between 61-80%; twice if battery life is between 41-60%; once if battery life is less than 40%; twice every 3 minutes if battery life is less than 20% (low battery). Note that on some devices (e.g. iPhone 7), it is possible to check battery status on the device's screen or widget.

USING YOUR REMIXRINGS AND 3D PRINTED CUSTOM PARTS


With the 3D printed custom sides, housing and grill you can revolutionize your REMIX speaker and forge your own personal relic which will be 3D sculpted in Milan and 3D printed in NYC.

1. Install REMIXRings to ensure that 3D printed sides are stable
2. 4x REMIXRings are included with the REMIX speaker to change the look of it
3. REMIXRings cover the screws on the REMIX speaker and ensure stability when the REMIX speaker is put on whatever type of surface
4. Make sure that the uneven side with two F printed on it is facing the front of the REMIX speaker

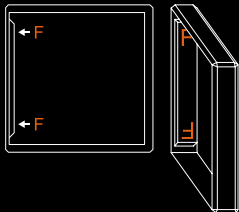


USING YOUR 3D PRINTED CUSTOM SIDES (SOLD SEPARATELY)

 1. Slide REMIXRings onto their housing
2. Slide 3D printed custom sides onto the REMIX speaker until the sides cover the REMIXRings and cannot slide any further creating a snug fit

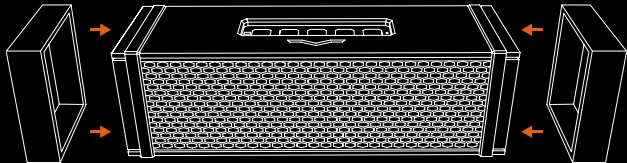


USING YOUR 3D PRINTED CUSTOM HOUSING (SOLD SEPARATELY)

 
1. Remove the REMIXRings from their housing if present
2. Unscrew screws from the surface of REMIX speaker

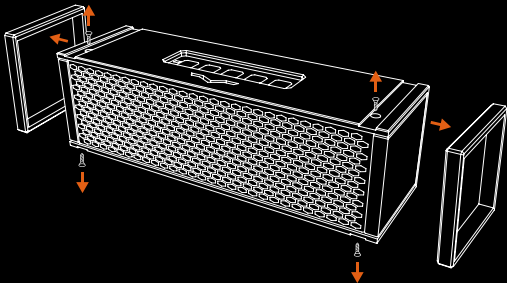

 3. Remove the pre-installed housing
4. Install and adjust the 3D printed custom housing onto the back of the REMIX speaker
5. Fasten the screws in for a snug fit

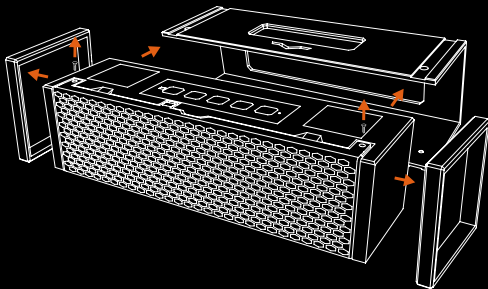

 USING YOUR 3D PRINTED CUSTOM GRILL (SOLD SEPARATELY)

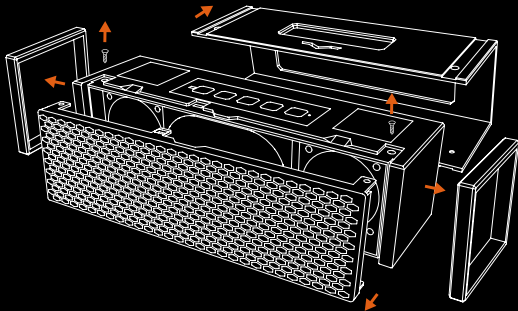

USING YOUR 3D PRINTED CUSTOM GRILL (SOLD SEPARATELY)

1. Remove the REMIXRings from their housing if present
2. Remove screws from the surface of REMIX speaker
3. Remove the pre-installed housing
4. Remove the pre-installed grill
5. Install and adjust the 3D printed custom grill onto the front of the REMIX speaker
6. Install and adjust the housing (3D printed custom or the included one) onto the back of the REMIX speaker
7. Fasten the screws in for a snug fit

The sound quality and acoustics performance of the REMIX speaker may vary when 3D parts are installed in place of the original parts. V-MODA will not be responsible for the acoustics performance after the 3D customization.

Troubleshooting

If you are experiencing trouble with your REMIX speaker, please refer to the troubleshooting guidelines below. If the problem persists, please contact the V-MODA Six Star Service at [V-MODA.com/Support](https://www.vmoda.com/Support) or 1.888.VMODA.LA.

TROUBLE	SUGGESTIONS
Pairing process trouble	- Turn off the REMIX speaker and turn it on again - Remember to turn on the Bluetooth feature on your device - Turn off the Bluetooth feature on any other device which has been previously paired (can only pair with one device at a time) - Reset paired devices history by pressing and holding Volume + and Volume - for 3 seconds - Try to pair with another device to be sure that both the REMIX speaker and your Bluetooth device are working properly - Go to Bluetooth settings and select "V-MODA REMIX"

TROUBLE	SUGGESTIONS
Receiving no audio or low quality audio from a audio source	- Check the battery - Check the pairing - Make sure the audio source is playing - Make sure the volume on the device is not muted or turned down - Reboot the source/device - Turn off the REMIX speaker and turn it on again - Reset paired devices history of the REMIX speaker - Try streaming from another device or select another track - Move the device and REMIX speaker closer (max 33 feet or 10m) - Keep away from any possible interference (wireless routers, other Bluetooth devices, microwaves etc.) - Close any applications on your device that are not in use and disable Wi-Fi
Audio and video do not match	Try streaming from another device or select another track. Due to technology limitations, there may be a delay from some sources or applications.

TROUBLE	SUGGESTIONS
No audio (in wired mode)	Make certain the audio device and the REMIX speaker jacks are free of debris and that the cable is securely connected.
Lack of or excessive bass or treble (in wired mode)	Turn off any audio enhancement features on audio device. Make sure cable is firmly connected to the REMIX speaker and device. If the problem persists, try another cable.
Uneven Sound (in wired mode)	Make sure cable is firmly connected to the REMIX speaker by ensuring male 3.5mm is inserted into female 3.5mm all the way.
Headphones deliver mono sound (in VAMP mode)	Make sure to properly follow the procedure to connect headphones in VAMP Mode.
Distorted sound	Check to make sure the problem is not with the audio device or the file you are listening to. Ensure the EQ settings on the device are set properly.

TROUBLE	SUGGESTIONS
REMIX speaker will not charge	- Make sure the Charging cable and source are functioning properly - Make sure both USB plugs are firmly connected into their sockets - Disconnect and reconnect the USB charging cable - If charging with your computer, be sure the USB port is powered and remember to plug in your computer

CLEANING YOUR REMIX SPEAKER

To clean the exterior surface of the REMIX speaker, you can wipe it using a soft and dry cloth. Do not use solvents, chemicals, or sprays and do not allow liquids to spill on the product.

POWER AND FREQUENCY

Power Transmission: Bluetooth EDR Mode (8DPSK): 0.55dBm

Frequency Band(s): 2.402GHz~2.480GHz

Limited Warranty

For a period of one (1) year from the date of retail purchase by the original end-use purchaser, V-MODA warrants that this product is free from any defects in manufacturing, materials and workmanship, under the following conditions:

- V-MODA will repair or replace the product within a reasonable period of time and free of charge for one (1) year from the date of retail purchase by the original end-use purchaser.
- Product must be purchased from a V-MODA authorized reseller and delivered to you in new condition, in original packaging. This warranty does not cover products purchased open box, sold as-is, sold by private party resale or any other third party purchases from unauthorized resellers.

- This Limited Warranty does not cover defects resulting from cosmetic damage, acts of God, misuse, accidents, commercial use, unauthorized alteration or modification of the product, improper connection, improper use or attempted repair by unauthorized distributors or resellers.
- This warranty is void if the label bearing the serial number has been removed or defaced.
- To obtain service under this limited warranty, visit www.v-moda.com/warranty to fill out the online warranty form and obtain further information.
- For other customer service inquiries, please e-mail support@v-moda.com. You may also call 1.888.VMODA.LA Monday through Friday, 9:00 am to 5:00 pm (Pacific Standard Time).

- This limited warranty gives you specific legal rights, and you also may have other rights that vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

V-MODA Immortal Life Program

We do not judge if you abuse your product. In the unlikely event you run over it with a tank, the V-MODA Immortal Life Program has your back.

All we ask is that you send the product (or what is left of it) to us and we will email you a coupon code towards a comparable product from our website.

For more info visit www.v-moda.com/immortal-life.

For other customer service inquiries, please e-mail support@v-moda.com. You may also call 1.888.VMODA.LA Monday through Friday, 8:30 am to 5:00 pm (Pacific Standard Time).

IMMORTAL
LIFE
PROGRAM

1YR
WARRANTY

CAUTION

If **serial number** on the product,
on manual cover or bottom of packaging
is missing or defaced, **please return**
to retailer immediately.

COMPLIANCES

NOTE: This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by V-MODA could void the user's authority to operate this equipment.

This device complies with Industry Canada license exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



V-MODA LLC hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements. The complete declaration of conformity can be found at [V-MODA.com/Compliance](https://www.v-moda.com/compliance).



Milano Design

©2017 V-MODA. All rights reserved.

V, V-MODA, REMIX and VAMP are registered trademarks of V-MODA, LLC.

U.S. patent pending application no. 14/740107.

iPhone®, iPad®, iPod® are trademarks of Apple Inc., registered in the U.S. and other countries.

The trademark "iPhone" is used with a license from Aiphone K.K.

Android is a trademark of Google Inc. and is in no way affiliated with V-MODA.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.
and any use of such marks by V-MODA is under license.

Other trademarks and trade names are those of their respective owners.

V-MODA LLC

5100 S. Eastern Ave. Los Angeles, CA 90040



PLEASE DO NOT RETURN TO RETAILER

For any issues relating to your V-MODA product,
please contact our Six Star Service directly.

visit

V-MODA.com/SUPPORT

email

support@V-MODA.com



twitter

@VMODASixStar

skype

V-MODASixStar

call

1.888.VMODALA





300404190007D02

REGISTER NOW AT
www.v-moda.com/register

